


### Symons Style Crusher Countershaft Oil Groove Locations


- The outer countershaft box bushing is normally installed at the 12:00 position (see illustration).
- The **exception** is when the motor is mounted above the countershaft box or 30 degrees to the left or right of top dead center.
- For this **exception**, you would then move the oil groove to the 9:00 position for a clockwise operation or move the oil groove to the 3:00 position for a counter-clockwise operation. (see illustration)
- NOTE: The inner countershaft bushing is always installed at the 12:00 position... there are no exceptions.

For more information, contact Midsouth Machine & Service at (865) 970-7900.


12:00 Position

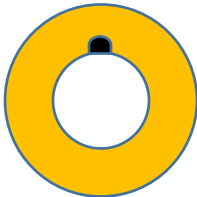

3:00 Position

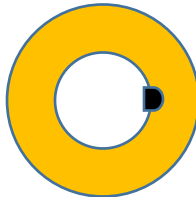

9:00 Position

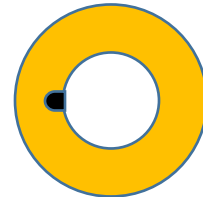

**DANGER**

*Lockout power source during  
installation, cleaning or servicing  
equipment or when making repairs.  
Failure to do so could result in severe  
bodily injury or death.*